



WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.

E-Z-ON[®] Crotch Strap Extenders

Users Guide


- To be used only on an E-Z-ON[®] product that comes with crotch straps
- Designed to extend the length of crotch straps.
- Follow E-Z-ON[®] instructions carefully.
- Replace after a crash or 5 years from the date of manufacture.

1. Thread each extender through the loop ends of the crotch straps.
Adjust the extenders to the length needed to fit the child securely.

2. Back-thread each extender to lock the webbing after adjusting. **Thread** each strap through the correct crotch buckle. **Start** through the rear of each top buckle-slot. **Thread** downward.

3. Adjust straps through each buckle to shorten or lengthen the crotch strap. **Adjust** the crotch straps snug, but **not** tight.

4. Back-thread webbing to lock.

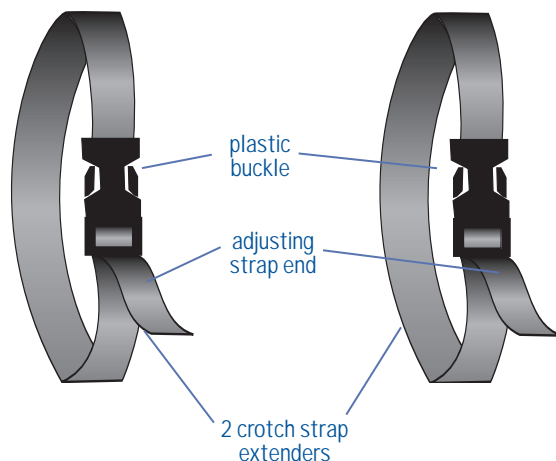

E-Z-ON[®]
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458

800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com

© 2005 E-Z-ON[®]