


WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.

E-Z-ON® Adjustable Vest Model #203 *for Family Vehicles*

- Meets FMVSS213.
- Use only for children 20-65 lbs.
- Must use in family vehicles with E-Z-ON tether mount, floor mount or wheelchair mount
- A vehicle belt is needed to install this restraint with a tether mount
- Replace after a crash or 5 years from the date of manufacture
- Be sure to register this restraint to be notified of a safety recall

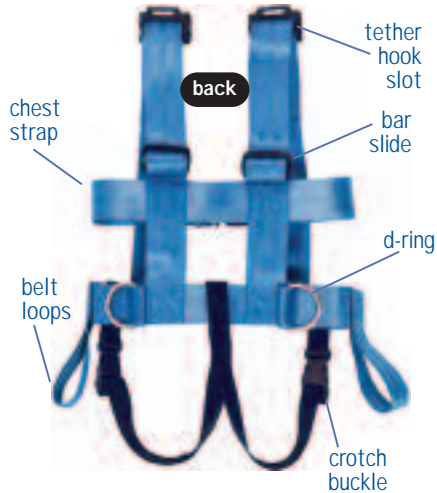

**E-Z-ON®
Products, Inc. of Florida**

605 Commerce Way West • Jupiter, FL 33458

800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com

© 2005 E-Z-ON®


E-Z-ON[®] Adjustable Vest Model #203

Installation Guide for Family Vehicles

1. Place the vest on the child with the parachute logo on the front.
2. Close and secure the push buttons
3. Pull webbing ends snug. Be sure the vest fits secure. Keep the hip straps low around the lap area.
4. Bring the crotch straps through the passenger's legs.
5. Thread each strap through the correct crotch buckle. Start through the rear of each top buckle-slot. Thread downward.
6. Adjust straps through each buckle to shorten or lengthen the crotch strap. Adjust the crotch straps snug, but not tight.
7. Back-thread web to lock webbing.



2

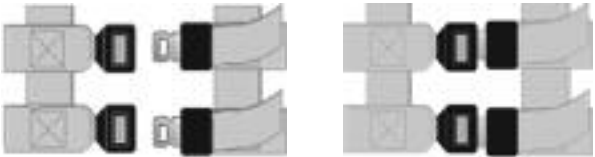

3



5



6



7






E-Z-ON® 203 Vest with Seat Mount
Use only for passengers 20-65 lbs.

8. Secure the shoulder straps with the shoulder adjusters. Pull webbing end through adjuster to reduce slack. Do not pull tight. This will pull the vest up. Keep hip straps low around the lap area.

9. Back-thread the web ends through the bar-slides to lock. Use a vehicle belt when using the E-Z-ON® tether mount. Lock the lap/shoulder belt with a locking clip to use the lap part only. Thread through belt loops on vest.

Use the vest belt loops for the E-Z-ON® tether mount only.

Use the vest d-rings for the E-Z-ON® floor mount only.

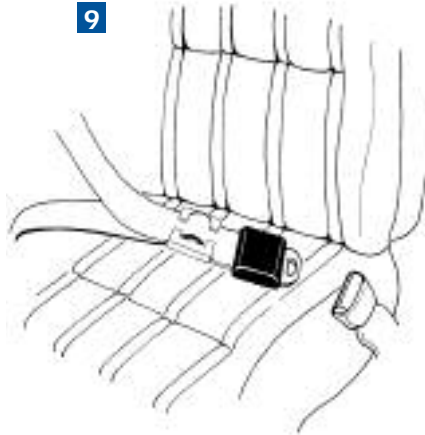

E-Z-ON®
Wheelchair
Mount



E-Z-ON®
Floor Mount

These mounts have black hooks that attach to the tether slots on the shoulder adjusters and hip d-rings



Be sure to register your E-Z-ON® Model 203 Vest for vehicles information on the back.

How to Register This Child Restraint

Child restraints could be recalled for safety reasons.
You must register this restraint in order to be notified of recall.

Fill out the REGISTRATION CARD enclosed with your E-Z-ON® Vest, send your name address and the restraint model number and manufacturing date to the address below or log on to our website www.ezonpro.com and fill out your product information via our registration page.

For recall information, call the U.S. Government Auto Safety Hotline at 1 (800) 424-9393. In the Washington D.C. area call (202) 366-0123.



E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458
800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com
© 2005 E-Z-ON®