

! WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.

E-Z-ON® Model #100S Seat Mount *for School Buses*

- Use **only** with E-Z-ON® vests 20-168 lbs.
- Use **only** on school bus seats.
- **Install only** on school bus seats that have entry between seat cushion and seat back.
- **Replace** after a crash or 5 years from the date of manufacture.
- **Be sure** to register this Seat Mount to be notified of a safety recall.
- **Passengers seated behind occupants with the Seat Mount must be restrained with a seatbelt or other restraint, or the seat be unoccupied.**



E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458
800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com
© 2005 E-Z-ON®

E-Z-ON[®] Model #100S Seat Mount


Installation Guide for School Buses

Installing the Seat Mount


Bus seats must have access between the bus seat cushion and seat back to install.

- 1. Unlock** bus seat and lift up.
- 2. Hang** the adjustable hook ends from the top of the bus seat.
- 3. Wrap** the mount strap around the bus seat;
 - a. lower** the push button strap over the back of the bus seat,
 - b. place** the face of the push button against the bus seat back, below passenger knee level,
 - c. wrap** the buckle strap down and around seat frame to connect to the push button.
- 4. Snap** the push button and buckle together.
- 5. Pull** webbing snug to create wrinkle and crease on bus seat top.
- 6. Mount** strap must be snug without slack in the webbing.
- 7. Allow** fixed hook ends to extend only 2" on bus seat.
- 8. Close and lock** bus seat.

Bus Seat Back

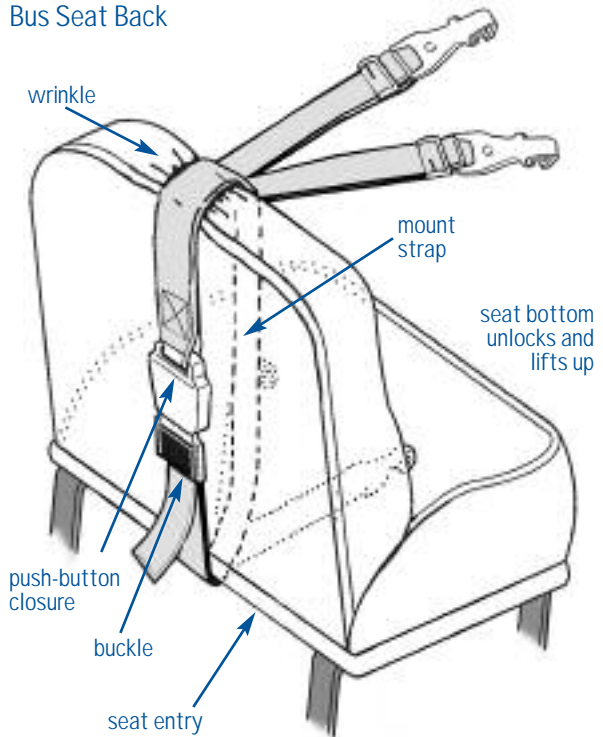

Bus Seat Front

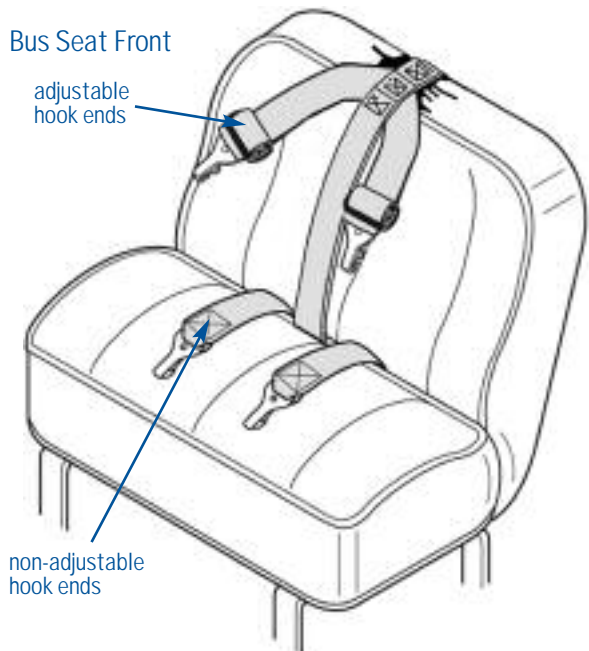

Securing the Passenger:

Be sure the passenger:


- has a properly fitted vest
- has all closures secure
- sits upright with buttocks against the bus seat back.

- 1. Attach** non-adjustable E-Z-ON® hook ends to the d-rings on the vest hip straps.
- 2. Attach** adjustable hook ends to the shoulders of the vest which can be:
 - a. d-rings (101Zipper, 101PB Vests) or
 - b. tether slots on the adjusters (103Z, 203 vests).
- The E-Z-ON® hooks are designed especially to deter accidental release. **Press** on the tongue of the hook to unlatch.
- Correct** the length on the adjustable hook ends to secure the passenger. This allows the passenger to sit upright without leaning forward.
 - a. **Hold** the loose end, move the bar slide and hook to adjust to the correct length.
 - b. **Thread** the loose end back through the bar slide as shown.
 - c. **Push** the bar slide down against the metal hook.
 - d. **Thread** the loose end back through the bar slide and pull the webbing snug.


1



2

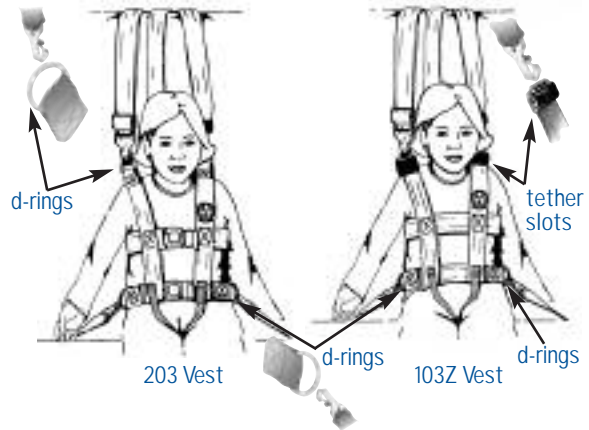

3

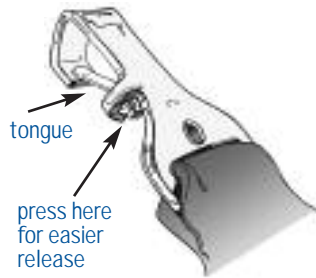


Be sure you follow all instructions on the vest and seat mount to secure the passenger safely.

4a

4b

4c

4d

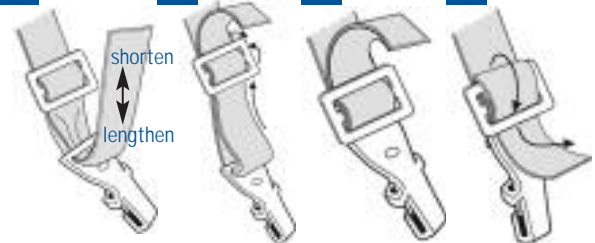

How to Register This Child Restraint

Child restraints could be recalled for safety reasons.
You **must register** this restraint in order to be notified of a recall.

Fill out the REGISTRATION CARD enclosed with your E-Z-ON® Seat Mount, **send** your name address and the restraint model number and manufacturing date to the address below or **log on** to our website www.ezonpro.com and **fill out** your product information via our registration page.

For recall information, **call** the U.S. Government Auto Safety Hotline at 1 (800) 424-9393. In the Washington D.C. area call (202) 366-0123.



E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458
800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com
© 2005 E-Z-ON®