


! WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.

E-Z-ON® Model #100TC Tether Mount *for Family Vehicles and School Busses*

- Use **only** for a passenger 20-168 lbs. with an E-Z-ON® Vest and your vehicle seatbelt.
- You **must** use your E-Z-ON® tether kit (included) to install this restraint. Vehicle tether anchors can also be used. Check vehicle manual for tether weight limits. **If weight limit is not known, use E-Z-ON® tether kit to complete installation.** Do not exceed vehicle tether anchor weight limits.
- **Replace** after a crash or 5 years from the date of manufacture.
- **Be sure** to register this Tether Mount to be notified of a safety recall.

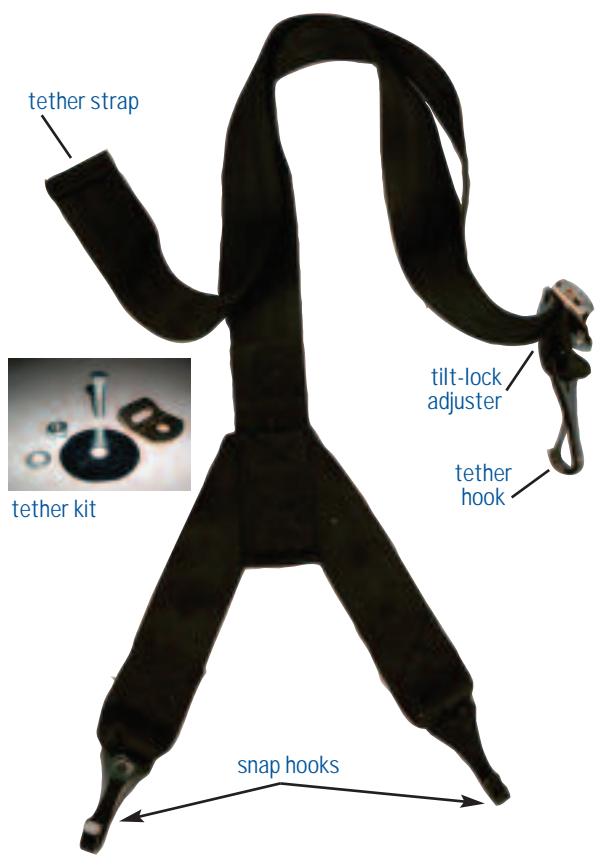

tether kit



tilt-lock adjuster



E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458
800-323-6598/561 7474-6920 • Fax 561-747-8779 • www.ezonpro.com
© 2005 E-Z-ON®

E-Z-ON® Model #100TC Tether Mount *Installation Guide for Family Vehicles*


1. **A. Check your vehicle manual** to locate tether anchor and weight limit. **Install** the E-Z-ON® tether kit, 20-168 lbs., if your passenger weighs more than your anchor limit.
- B. Find** the correct location to install tether mount anchor kit. Vehicles older than 1999 may have predrilled anchor holes 5/16" (8mm) and/or threaded weld nuts. These are smaller than the E-Z-ON® bolt. **Make** smaller holes larger, **or drill** 1-1/4" away from the original hole with a 7/16" bit. **Check** with a certified mechanic and **read** your vehicle manual before drilling.
- C. Tools Needed:** Drill with 7/16" bit, screw driver, wrench, silicone sealant, eye protection, tape measure, tether kit included (prepare as shown).
- D. Attach** the tether hook to the tether swivel bracket.




WARNING! Locate fuel and exhaust lines before drilling.

Tether Kit Assembly


C

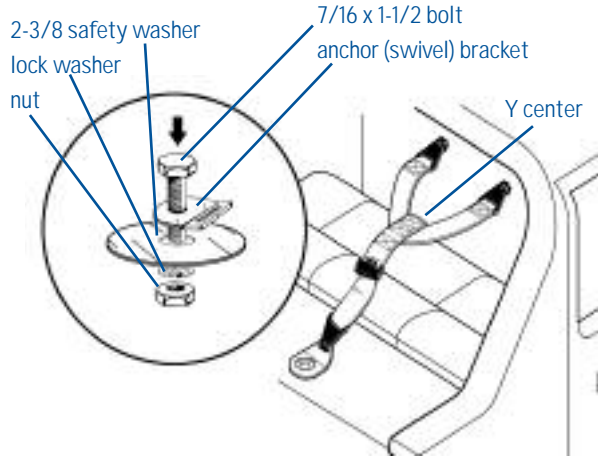

Drill directly inline with the tether strap, (or within 20 degrees of the "Y" center) on solid flat, sheet metal. The anchor **should not be installed** more than 45 degrees from harness shoulder level. **Do not drill** under or below the seat back. **Make sure** swivel bracket slot faces the front of the vehicle **before tightening**. **Silicone** the hole if it is open to the outside. **Follow the next steps** to complete installation.

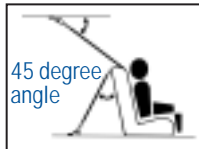

45 degree angle

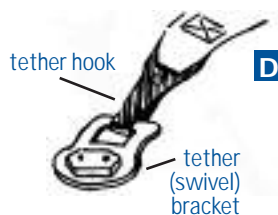

D

Securing the Passenger:

Be sure the passenger:

- has a properly fitted vest
- has all closures secure
- sits upright with buttocks against the vehicle or bus seat back.


1. **Attach** adjustable snap hook ends to the shoulders of the E-Z-ON® vest which can be:
 - a. d-rings (101Zipper, 101PB Vests) or
 - b. tether slots on the adjusters (103Z, 203 vests).

2. **Thread** the vehicle belt through the vest loops. **Buckle** the belt low on the lap.

3. **Guide** the lap belt through the connected crotch strap loops. Crotch straps become a belt guide when used.

4. **Reduce** tether slack
 - a. **lift up** on the tilt-lock adjuster
 - b. **pull down** on the top strap to shorten
 - c. **pull down** on the base strap to lengthen.


1

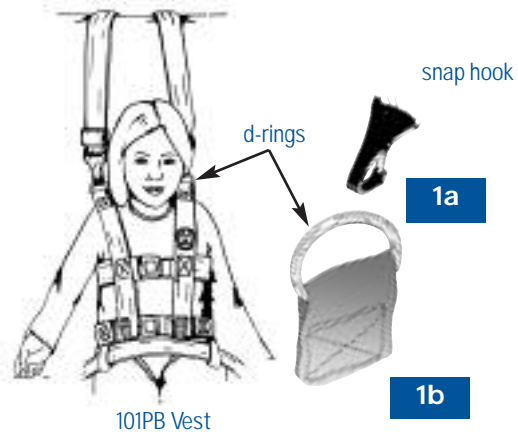

2



4

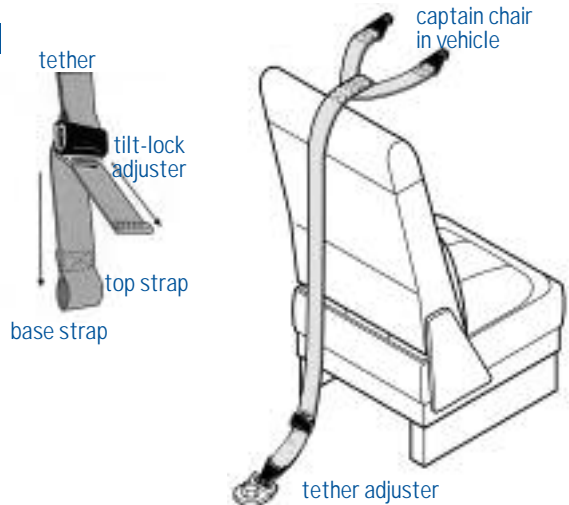


E-Z-ON[®] Model #100TC Tether Mount *Installation Guide for School Buses*

- 1. Tether installation** must be used on a school bus seat with pre-drilled anchor holes and be seat belt ready(FMVSS210 approved) or tether anchor can be installed via a floor anchor method see 1 C&D.
- 2. Select** the anchor hole closest to the "Y" center of the tether strap or within 20 degrees of the "Y" center.
- 3. Unscrew** the nut on the seat belt hardware located under the bus seat. (Choose the seat belt position where the tether will be used.)
- 4. Slide** the swivel bracket on the existing bolt (slot facing the seat back) and screw the nut back on securely.
- 5. The anchor hardware** can hold the seat belt and tether anchor weight. This has been tested.
- 6. Attach** the tether hook to the swivel bracket. Follow steps 1-5 on page 3, Securing the Passenger.



Tether anchors under bus seat using seat belt hardware and an E-Z-ON swivel bracket

Tether bracket included with the hardware tether kit

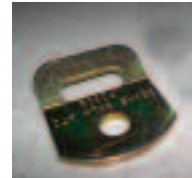

How to Register This Child Restraint

Child restraints could be recalled for safety reasons. You must register this restraint in order to be notified of a recall.

Fill out the REGISTRATION CARD enclosed with your E-Z-ON[®] Tether Mount, send your name address and the restraint model number and manufacturing date to the address below or **log on** to our website www.ezonpro.com and **fill out** your product information via our registration page.

For recall information, **call** the U.S. Government Auto Safety Hotline at 1 (800) 424-9393. In the Washington D.C. area call (202) 366-0123.