



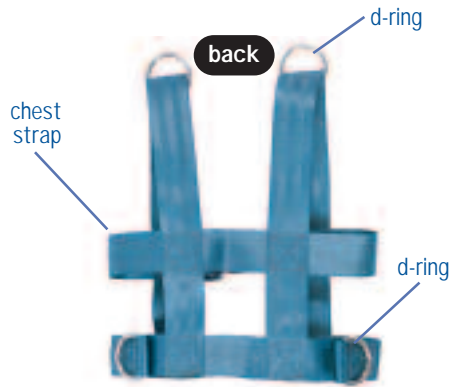

WARNING! DEATH or SERIOUS INJURY can occur if manufacturer's instructions are not followed correctly.

E-Z-ON® Model #101/102 Push Button Vest *for School Buses*

- Meets FMVSS213.
- **Use** only for passengers 20-168 lbs.
- **Must** use in school buses with E-Z-ON® seat mount or floor mount.
- **Do not** use a bus seatbelt with this vest. **Use** only an E-Z-ON® vest with belt loops and a bus lap-belt if an E-Z-ON® tether mount is used in a school bus.
- **Replace** after a crash or 5 years from the date of manufacture.
- **Be sure** to register this restraint to be notified of a safety recall.

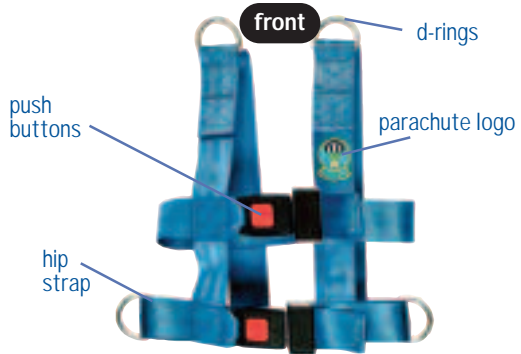

E-Z-ON®
Products, Inc. of Florida


605 Commerce Way West • Jupiter, FL 33458

800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com

© 2005 E-Z-ON®

E-Z-ON® Model #101/102 Push Button Vest *for School Buses*

1. Place the vest on the passenger with the parachute logo on the front.
2. Close and secure the push buttons.
3. Pull webbing ends snug. Be sure the vest fits secure. **Keep** the hip straps low around the lap area. If your vest has crotch straps follow below, otherwise go to step 8.
4. Bring the crotch straps through the passenger's legs.
5. Thread each strap through the correct crotch buckle. **Start** through the rear of each top buckle-slot. **Thread** downward.
6. **Adjust** straps through each buckle to shorten or lengthen each crotch strap. **Adjust** the crotch straps snug, but **not** tight.
7. **Back-thread** webbing to lock webbing.
8. **Keep** hip straps low around the lap area.

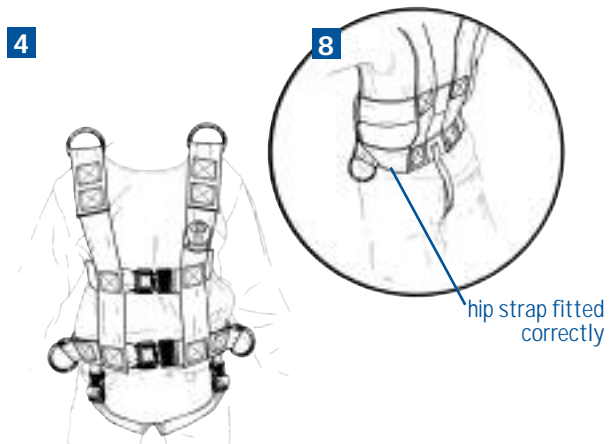

9. Use shoulder and hip d-rings to secure snap hooks for either the E-Z-ON® floor or wheelchair mounts with this vest.

10. Follow E-Z-ON® wheelchair or floor mount instructions to secure snap hooks to the vest.

11. Secure the E-Z-ON® hooks when attaching the seat mount to the shoulder and hip d-rings on the vest.


This restraint must be used with an E-Z-ON® mount. Read both the mount and vest instructions carefully.

9



Snap hooks are secured to d-rings on the vest.

10

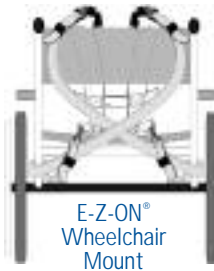

E-Z-ON® Wheelchair Mount



E-Z-ON® Floor Mount

11

E-Z-ON® Seat Mount for School Buses only




front



back

E-Z-ON® hook attaches to hip d-rings on the vest

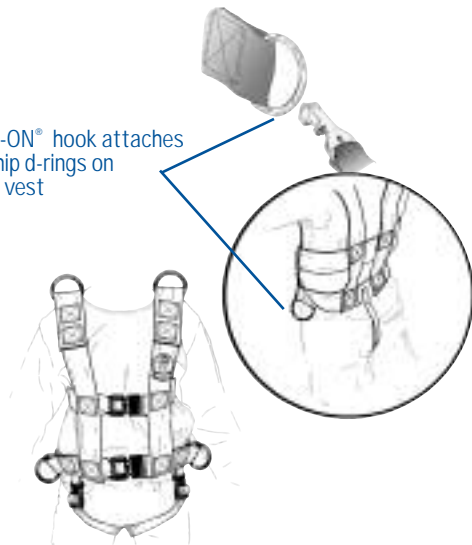

Be sure to register your E-Z-ON® Vest for school buses information on the back.

How to Register This Child Restraint

Child restraints could be recalled for safety reasons.

You **must** register this restraint in order to be notified of a recall.

Fill out the REGISTRATION CARD enclosed with your E-Z-ON® Vest, **send** your name address and the restraint model number and manufacturing date to the address below or **log on** to our website www.ezonpro.com and **fill out** your product information via our registration page.

For recall information, **call** the U.S. Government Auto Safety Hotline at 1 (800) 424-9393. In the Washington D.C. area call (202) 366-0123.



E-Z-ON®
Products, Inc. of Florida

605 Commerce Way West • Jupiter, FL 33458
800-323-6598/561-747-6920 • Fax 561-747-8779 • www.ezonpro.com
© 2005 E-Z-ON®